SILVERCREST®

Digital Pen

for digitally recording handwritten notes

GB IE User manual and service information

DK Brugervejledning og serviceinformation

DGP1000

English.....1

Dansk 39

Before using this device for the first time, please read the following instructions carefully, even if you are familiar with the use of electronic devices.

Please keep this manual safe for future reference. If you pass on the device to someone else, be sure to always include these instructions.

⚠ This symbol in the following text indicates possible hazards resulting from the use of the device that can lead to personal injury or material damage.

Registered trademarks

IBM, IBM PC, PS/2 are registered trademarks of IBM Corporation or IBM Deutschland GmbH.

USB is a registered trademark of USB Implementers Forum, Inc.

Microsoft and Windows are registered trademarks of Microsoft Corporation in the United States of America and/or other countries.

CorelDRAW is a registered trademark of Corel Corporation.

Contents

Supplied items **4**
Safety instructions **5**
General precautions 5
Intended use 5
Legal stipulations 5
Notes on conformity 6
Operating environment/Environmental conditions 6
Operational safety 6
Repair 7
Cleaning 7
Disposal of old devices 7
Technical data **8**
Product description **9**
Minimum system requirements 9
Supplied software 9
Operating elements and connections 10
Getting started **11**
Step 1: Insert the batteries into the digital pen 11
Step 2: Fit the ballpoint pen refill 11
Step 3: Install the "Note Manager" 12
Step 4: Install "MyScript Notes Lite" 15
Step 5: Connect the base unit 18
Step 6: Start the "Note Manager" for the first time 19
Operation **21**
Attaching the base unit 21
Switching the base unit on or off 22
Display icons 23
Holding the pen 23
Working with the digital pen in online mode 24
Working with the digital pen in offline mode 25
The icon bar of the virtual block 26
Note Manager 27
The Note Manager user interface 27
The Note Manager menus 28
Convert note to text 30

Troubleshooting 33
Replacing the pen batteries 33
Replacing the pen refill 34
Getting assistance 34
Licence terms – licence agreement 35
Warranty information and hotline numbers 36

Supplied items

	1 x base unit DGP1000-R
	1 x base unit connection cable (USB-A connector / Mini USB connector)
	1 x digital pen DGP1000-P
	2 x batteries type SR41 (Varta V392, 1.55 V) for the digital pen
	1 x ballpoint pen refill for the digital pen
	1 x ballpoint pen refill extractor
	1 x CD "Note Manager for Silvercrest DGP1000" 1 x CD "MyScript Notes Lite 2.2 for Silvercrest DGP1000"
	1 x user manual

Safety instructions

General precautions

- Keep electrical devices out of the reach of children! Never allow children to use electrical devices unsupervised. They cannot always recognise possible hazards.
- Small parts can be life-threatening if swallowed. Also note that there is a risk of suffocation if air passages are blocked by the plastic packaging.
- New devices may emit a slight odour during the first few hours of operation. This is normal and disappears after a short time. Until then ventilate the room regularly.

Intended use

The digital pen is an information technology device. It is exclusively designed for recording graphics or texts. Any other use is not in keeping with its intended purpose.

The manufacturer does not assume any liability if the device ...

- is not used as intended.
- is damaged or modified prior to connection and use.

The digital pen may only be used for private purposes. It is not to be used for industrial or commercial purposes.

Legal stipulations

- The device may only be connected to computers which comply with this product from a safety perspective and with regard to electromagnetic compatibility and shielding quality.
- Manufacturer: TARGA GmbH, Postfach 2244, D-59482 Soest
- The warranty period is 3 years from the purchase date. The warranty conditions are given at the end of this manual. In case of warranty claims, have your proof of purchase ready and call our hotline (the number is given in the warranty conditions).

Notes on conformity

This device conforms fully with the requirements and provisions of the EMC Directive 2004/108/EC. The Declaration of Conformity can be found at the end of this manual.

This device complies with the standards EN 55022: 2006 and EN 55024: 1998 + A1: 2001 + A2: 2003.

Compliance with these standards is no longer guaranteed in the event of unauthorised modification or changes to the device. The manufacturer does not accept liability for any damage incurred as a result.

Operating environment/Environmental conditions

- Protect the device against moisture, vibration, dust, heat and direct sunlight, as these could damage the product.
- The device should not be used outdoors or in tropical climates.

Operational safety

- Always read and comply with the instructions in the documentation of your computer before connecting the base unit of the digital pen.
- If this product is exposed to extreme temperature fluctuations, condensation can lead to the accumulation of moisture which can cause a short circuit. In this case wait until the device has reached ambient temperature before use.
- To disconnect a cable, always pull the connector and never the cable. Ensure that the cables are not kinked. Always position the cables so that they cannot be stepped on or cause an obstruction.
- Never place any burning objects such as candles or any objects containing liquids such as vases, cups or glasses next to the device.
- Keep the device away from high-frequency and magnetic interference sources (e.g. TVs, mobile phones, loudspeakers) to prevent functional faults.
- Only use batteries of the same type and the same charging capacity. Always ensure correct polarity of the batteries. Remove the batteries if you will not be using the device for a prolonged period of time, as they can leak. Contact with the skin will cause chemical burns. For this reason it is absolutely essential to remove leaking batteries with acid-resistant protective gloves.
- Never try to recharge batteries and never throw them into an open fire (risk of explosion).
- Remember to protect the environment. Used batteries should not be disposed of in domestic waste. They must be taken to a collection point for old batteries.

Repair

The device must be repaired if fluid has penetrated inside the housing, if the housing is damaged or if the device no longer works.

⚠ Never open the device. Any repairs should be carried out exclusively by qualified specialist, service or maintenance personnel!

Cleaning

⚠ Always disconnect the base unit from the computer before cleaning it.

The base unit must always be clean, otherwise its correct function cannot be ensured.

If soiled, clean the base unit with a dry cloth, and moisten the cloth slightly to remove stubborn dirt. Do not use any solvents or corrosive or gaseous cleaning agents. Ensure that no moisture penetrates the base unit.

Disposal of old devices

The Waste Electrical and Electronic Equipment Directive (WEEE) 2002/96/EC stipulates that it is no longer permitted to dispose of old electrical and electronic devices as municipal waste. Please only dispose of this product at a collection point for old devices in your area.

The correct disposal of old devices in this manner will prevent environmental pollution and human health hazards.

Technical data

Model	DGP1000
Technology	Infrared and ultrasound
Dimensions	
Base unit	77.5 x 34 x 13 mm (L x W x H)
Pen	141 x 16 mm
Weight	
Base unit	25 g
Pen	17.5 g (with batteries)
Power supply	
Base unit	With USB connector (max. 80 mA, 0.4 W)
Pen	Battery-powered (2 x 1.55 V, type SR41)
Resolution	1,000 dpi (dots per inch)
Report rate	58 rps (reports per second)
Base unit	
Memory	2 MB for approx. 100 DIN-A4 pages
Page counter display	Up to 199 pages
Operating environment	
Temperature	5 - 35 °C
Air humidity	85 % rel. air humidity max.

Product description

The base unit records the movement of the digital pen when you are writing on a normal sheet of paper and saves it as a vector graphic. You can upload this graphic onto your computer and edit or archive it or send it as an e-mail attachment.

The digital pen can be used in both "online" and "offline" modes:

Online mode: The base unit is connected to the computer with its connection cable. Your notes or drawings are sent to the computer as you are writing and displayed on its screen.

Offline mode: The base unit is used without a computer. Your recorded input is saved in the 2 MB memory of the base unit. When you connect the base unit to a computer, your recorded input can be uploaded from the internal memory onto the computer.

Minimum system requirements

- PC with Pentium 3 processor or higher with 1 GHz and USB socket
- 50 MB free memory on the hard disk
- 256 MB RAM
- 32-bit colour graphics card
- Screen with a resolution of 1024 x 768 pixels
- CD or DVD drive for installing the software
- Operating system Windows® XP (SP2), Windows® Vista or Windows® 7

Supplied software

- **Note Manager** is the application software of the digital pen which is required for use of the pen.
- **MyScript Notes Lite** is a programme which can convert the handwritten notes you have made with the digital pen to digital text. It can then be edited, for example with a word processing programme.

Operating elements and connections

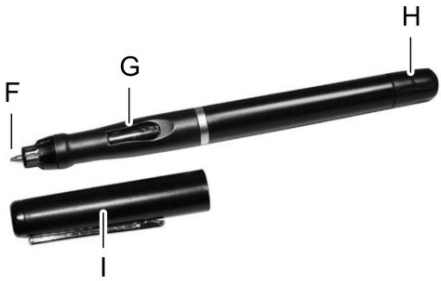

Base unit	Digital pen
A: Securing clip	F: Ballpoint pen refill
B: USB socket	G: Pen button for PC mouse functions
C: Display	H: Battery compartment cap
D: Base unit button	I: Pen cap
Function in online mode	
Switchover between mouse and pen mode	
Functions in offline mode	
Press briefly: Create new page	
Press and hold: Switch base unit on or off	
E: Sensors	

Note:

The pen does not have an on/off switch. It switches on automatically when the pen cap (I) is removed and switches off when the cap is replaced.

In offline mode the base unit switches off automatically if no signals are received from the pen for 10 minutes. Press the base unit button (D) to switch the base unit on again.

Getting started

Proceed as follows to start using your digital pen quickly and easily.

Step 1: Insert the batteries into the digital pen

The warning symbol (⚠) on the pen informs you that the batteries must be inserted with the correct polarity.

Proceed as follows:

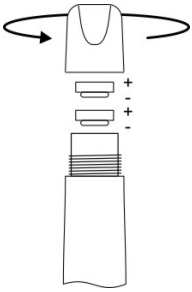

1. Unscrew the battery compartment cap (H).
2. Insert two batteries type Varta V392.

   The plus pole (+) of both batteries must always point upwards!
3. Screw the battery compartment cap on again.

Step 2: Fit the ballpoint pen refill

Proceed as follows:

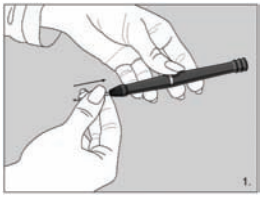

1. Insert a new ballpoint pen refill (F) into the pen and press it as far as possible into the pen.

⚠ Only insert a ballpoint pen refill into the pen which has the following dimensions:
Length 67 mm; cross-section 2.35 mm

Refills can be obtained from stationery shops - take your old refill for reference purposes.

A description of how to change the refill when it is empty is given in the "Troubleshooting" section.

Step 3: Install the "Note Manager"

"Note Manager" is the application software of the digital pen which is required for use of the pen.

Proceed as follows:

1. Place the "Note Manager" CD in your CD drive.

   The installation wizard normally starts automatically. If it does not start automatically, proceed as follows:

   - Open the file browser (Explorer) (right-click on [Start] → "Explorer" menu).
   - Click the icon of your CD or DVD drive in My Computer.
   - Start installation by double-clicking the "setup" file.

2. Select the language in which the installation should be run and click [OK].

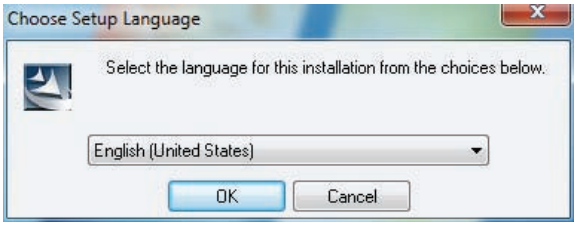

The "InstallShield Wizard" opens:

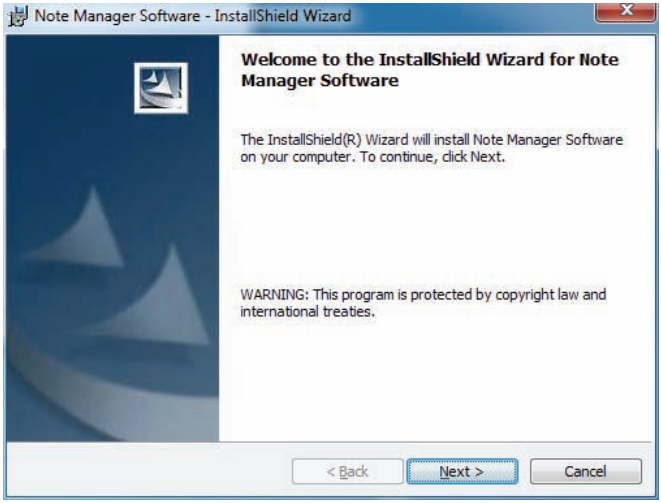
Note Manager Software - InstallShield Wizard
Welcome to the InstallShield Wizard for Note Manager Software
The InstallShield(R) Wizard will install Note Manager Software on your computer. To continue, click Next.
WARNING: This program is protected by copyright law and international treaties.
< Back
Next >
Cancel

3. To continue installation, click [Next].

   A dialogue box then opens in which you can change the destination folder where the programme should be saved. We recommend leaving the standard selection unchanged.

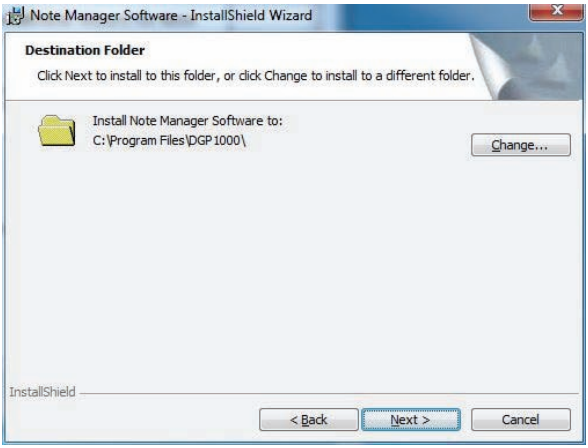
Note Manager Software - InstallShield Wizard
Destination Folder
Click Next to install to this folder, or click Change to install to a different folder.
Install Note Manager Software to:
C:\Program Files\DGP1000\
Change...
InstallShield
< Back
Next >
Cancel

4. Click [Next] again.

   Another dialogue box is opened.

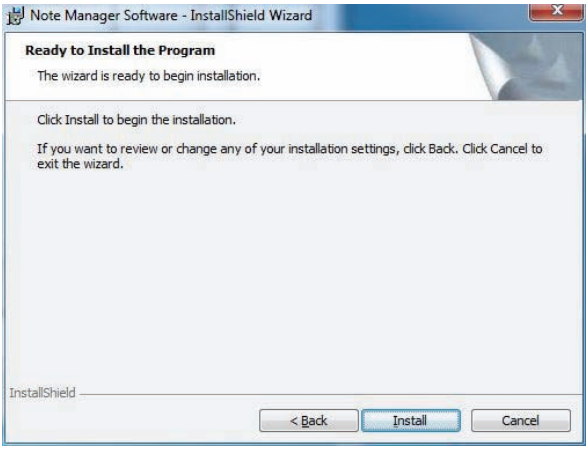
Note Manager Software - InstallShield Wizard
Ready to Install the Program
The wizard is ready to begin installation.
Click Install to begin the installation.
If you want to review or change any of your installation settings, click Back. Click Cancel to exit the wizard.
InstallShield
< Back
Install
Cancel

5. To start installation, click [Install].

   The next dialogue box shows the installation progression. When installation has been completed, the following dialog box opens:

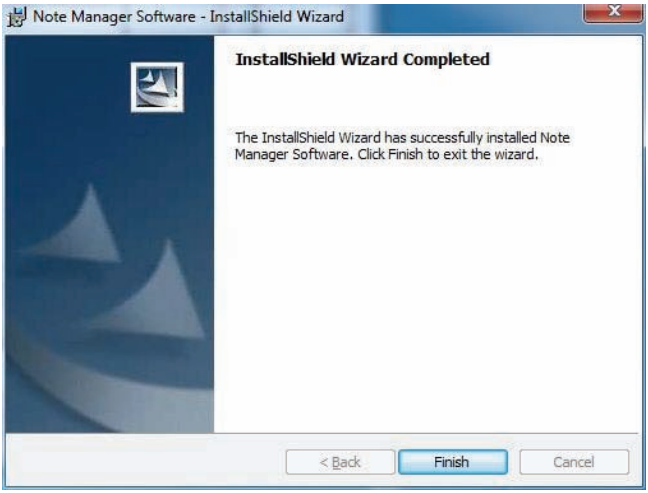
Note Manager Software - InstallShield Wizard
InstallShield Wizard Completed
The InstallShield Wizard has successfully installed Note Manager Software. Click Finish to exit the wizard.
< Back
Finish
Cancel

6. Click on [Finish].

   The installation wizard is then closed. It is not necessary to restart the computer.

Step 4: Install "MyScript Notes Lite"

"MyScript Notes Lite" is a programme which can convert the handwritten notes you have made with the digital pen into digital text. It can then be edited, for example with a word processing programme. Its installation is optional.

Proceed as follows:

1. Place the ""MyScript Notes Lite" CD in your CD drive.

   The installation wizard normally starts automatically. If it does not start automatically, proceed as follows:

   - Open the file browser (Explorer) (right-click on [Start] → "Explorer" menu).
   - Click the icon of your CD or DVD drive in My Computer.
   - Start installation by double-clicking the "setup" file.

2. Select the language in which the installation should be run and click [Next].

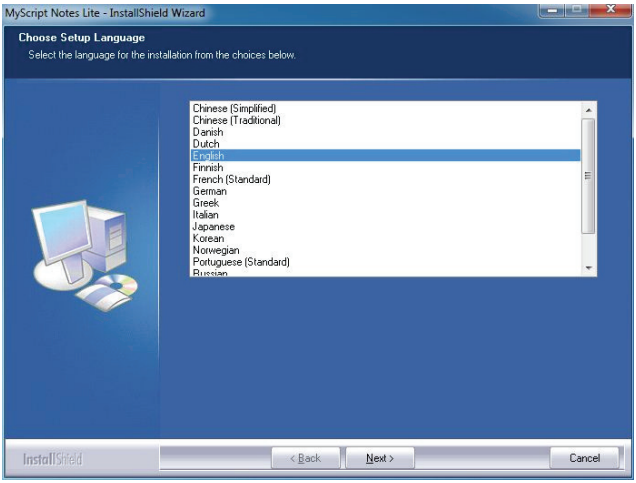

The "InstallShield Wizard" opens:

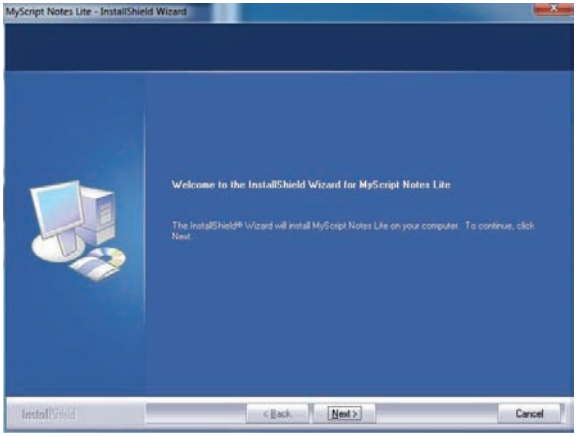
MyScript Notes Lite - InstallShield Wizard
Welcome to the InstallShield Wizard for MyScript Notes Lite
The InstallShield® Wizard will install MyScript Notes Lite on your computer. To continue, click Next.
InstallShield
< Back
Next >
Cancel

3. To continue installation, click [Next].

   The licence agreement is displayed:

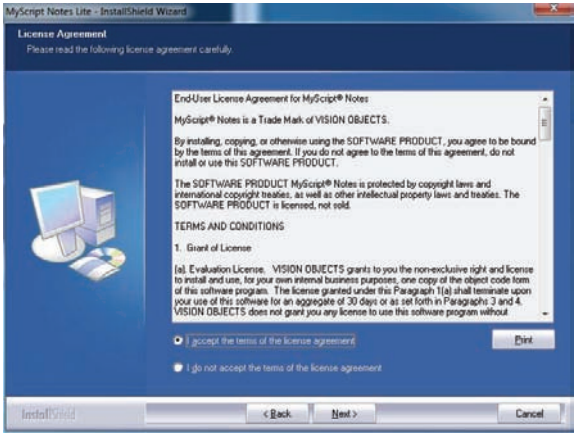
MyScript Notes Lite - InstallShield Wizard
License Agreement
Please read the following licence agreement carefully.
End-User License Agreement for MyScript® Notes
MyScript® Notes is a Trade Mark of VISION OBJECTS.
By installing, copying, or otherwise using the SOFTWARE PRODUCT, you agree to be bound by the terms of this agreement. If you do not agree to the terms of this agreement, do not install or use this SOFTWARE PRODUCT.
The SOFTWARE PRODUCT MyScript® Notes is protected by copyright laws and international copyright treaties, as well as other intellectual property laws and treaties. The SOFTWARE PRODUCT is licensed, not sold.
TERMS AND CONDITIONS
1. Grant of License
(a). Evaluation License. VISION OBJECTS grants to you the non-exclusive right and license to install and use, for your own internal business purposes, one copy of the object code form of this software program. The license granted under this Paragraph 1(a) shall terminate upon your use of this software for an aggregate of 30 days or as set forth in Paragraphs 3 and 4. VISION OBJECTS does not grant you any license to use this software program without
I accept the terms of the license agreement
I do not accept the terms of the license agreement
Print
InstallShield
< Back
Next >
Cancel

4. Read the licence terms. If you accept the terms, check the option "I accept the terms of the licence agreement". Then click [Next].

   A dialogue box then opens in which you can change the destination folder where the programme should be saved. We recommend leaving the standard selection unchanged.

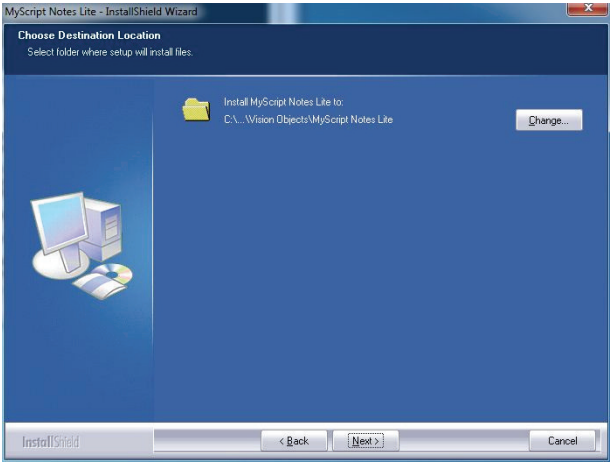

5. Click [Next] again.

   The next dialogue box shows the installation progression. When installation has been completed, the following dialog box opens:

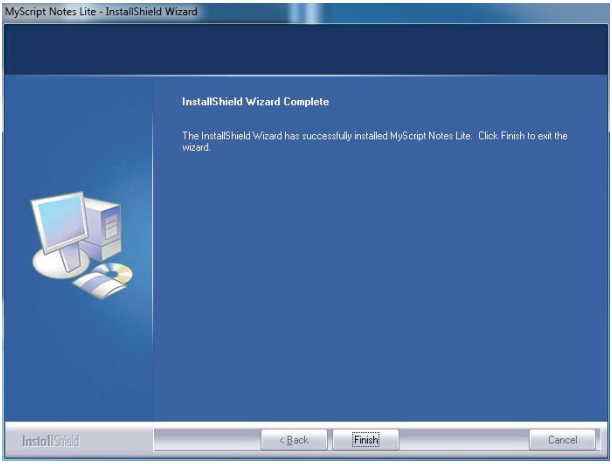
MyScript Notes Lite - InstallShield Wizard
InstallShield Wizard Complete
The InstallShield Wizard has successfully installed MyScript Notes Lite. Click Finish to exit the wizard.
InstallShield
< Back
Finish
Cancel

6. Click on [Finish].

   The installation wizard is then closed. It is not necessary to restart the computer.

Step 5: Connect the base unit

Connect the base unit to the computer to ..

- enter notes in online mode which are then shown directly on the computer screen.
- upload notes onto the computer.
- charge the internal rechargeable battery of the base unit.

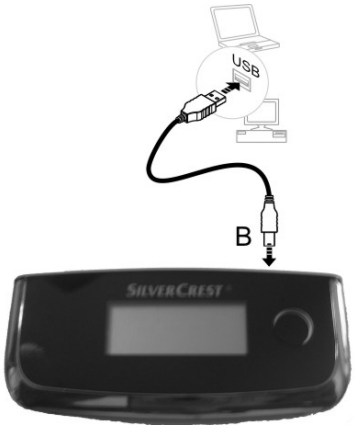

Proceed as follows:

1. Connect the USB socket (B) on the base unit to a free USB socket of your computer with the connection cable.

   The following message then appears after a short time: "Found new hardware ...".

   The base unit of the digital pen is detected by your computer. It cannot be used, however, until the "Note Manager" has been started.

Note: The base unit is supplied with power by an internal rechargeable battery which is charged through the USB interface. The battery is fully charged when a battery symbol with three bars is shown on the display (C).

If the base unit is not recognised, remove and reinsert the USB connector. You can also try using a different USB socket on your PC.

Step 6: Start the "Note Manager" for the first time

Proceed as follows:

1. Start the "Note Manager" by selecting [Windows Start button] → "All programmes" → "Note Manager" → "Note Manager" or the "Note Manager" icon on your desktop.

   Note: If a Windows firewall security alert appears, click the [Unblock] button, otherwise you will not be able to use the "Send to" functions (e.g. for e-mails).

   The "Set Digital Note Mode" dialogue box appears.

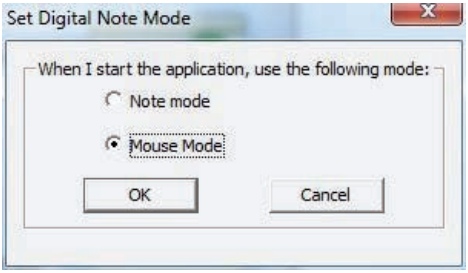

2. Check the "Note mode" option if you want to make notes or draw sketches with the digital pen when the programme has started.

   Check the "Mouse mode" option if you want to work with the digital pen in the same way as with a mouse when the programme has started. This means:

   - You position the mouse pointer by moving the pen lightly over the paper without making contact.
   - You carry out a left mouse click by touching the paper briefly with the pen or by pressing the pen button (G).

   Tip: These settings can be changed at any time in the "Note Manager" (Menu item "Configuration" → "Set digital note mode").

3. Close the dialogue box by clicking [OK].

The following dialogue box opens:

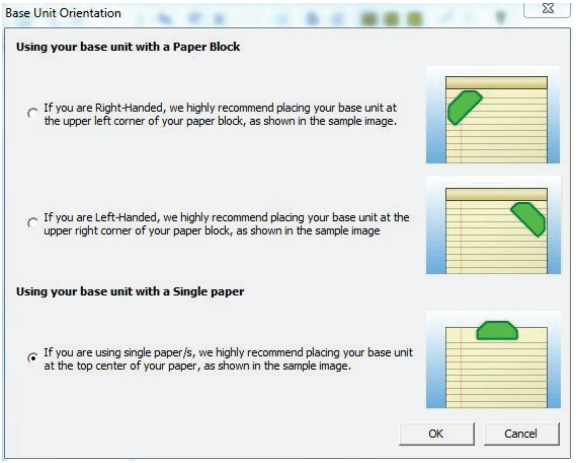
Base Unit Orientation
Using your base unit with a Paper Block
If you are Right-Handed, we highly recommend placing your base unit at the upper left corner of your paper block, as shown in the sample image.
If you are Left-Handed, we highly recommend placing your base unit at the upper right corner of your paper block, as shown in the sample image
Using your base unit with a Single paper
If you are using single paper/s, we highly recommend placing your base unit at the top center of your paper, as shown in the sample image.
OK
Cancel

4. Select the option for the base unit orientation you prefer and clip it onto your block as shown in the figure below.

> **Tip:** These settings can be changed at any time in the "Note Manager" (Menu item "Configuration" → "Base unit orientation").

Please refer to the "Operation" section for more information.

5. Click [OK].

The "Note Manager" window opens. This is where you organise your notes and sketches.

Operation

Attaching the base unit

The base unit is attached to a sheet of paper or block with its clip (A).

The best position for the base unit is at the top centre of the sheet of paper or block

If this is not possible due to the block type, attach the base unit to the side of the block, either at the top left (if you are right-handed) or top right (if you are left-handed)

1. Position the base unit on the paper.
2. In the "Configuration" menu select the command "Base unit orientation".
3. In the dialogue box which then opens select the option for the current base unit orientation and close the dialogue box with [OK].

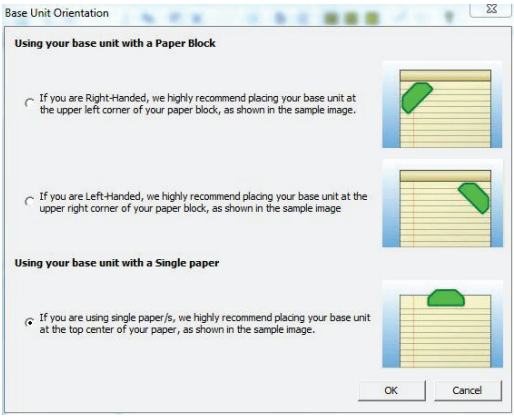
Base Unit Orientation
Using your base unit with a Paper Block
If you are Right-Handed, we highly recommend placing your base unit at the upper left corner of your paper block, as shown in the sample image.
If you are Left-Handed, we highly recommend placing your base unit at the upper right corner of your paper block, as shown in the sample image
Using your base unit with a Single paper
If you are using single paper/s, we highly recommend placing your base unit at the top center of your paper, as shown in the sample image.
OK
Cancel

Note: If the actual orientation of the base unit does not match the selected option, the digital pen does not work correctly.

Switching the base unit on or off

- In online mode:

  As soon as the base unit is connected to a PC (online mode), it switches on automatically.

- In offline mode:

  To switch the base unit on and off in offline mode, press the base unit button (D) until a number and the battery symbol appear on the display or until the display switches off.

  In offline mode the base unit switches off automatically if no signals are received from the pen for 10 minutes. Press the base unit button to switch the base unit on again.

Display icons

The base unit is connected to a computer.

The icon flashes when data are being uploaded to the computer.

The memory of the base unit is 90 percent full. Upload the data onto a computer and delete the internal memory of the base unit.

The pen batteries are run down and should be replaced.

Status of the battery in the base unit; 3 bars: full; 0 bars: empty

Pen mode active; you can enter your notes.

Mouse mode active; you can use your digital pen as a computer mouse

Number of pages saved in the memory (here 188 pages).

Holding the pen

- Use your digital pen in the same way as a normal pen. The pen should be held at an angle of 45 to 90 degrees.
- There should always be "visual contact" between the tip of the pen and the base unit. For this reason do not place your free hand between the base unit and the pen.
- If you want to convert your notes into digital text later with the "MyScript Notes Lite" programme, for example to edit it with a word processing programme, keep your writing as regular and horizontal as possible.

Working with the digital pen in online mode

Proceed as follows:

1. Connect the base unit to a free USB socket on your computer with the connection cable.
2. Secure the base unit to a sheet of paper or a block.
3. Start the "Note Manager" by selecting [Windows Start button] → "All programmes" → "Note Manager" → "Note Manager".

   The "Note Manager" window opens.
4. If mouse mode is active (PC mouse on display), press the base unit button (D) once.

   A pen is shown on the display in pen mode. As soon as the pen touches the paper, a virtual block and an icon bar appear on the screen.

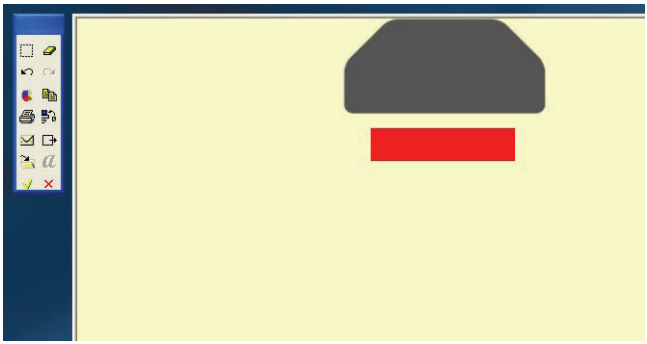

Tip: You can switch between mouse and pen mode by placing the pen on the square area shown in the figure.

Information on the functions of the icons is given further on in the section "The icon bar of the virtual block".

5. Enter your notes.
6. To save your notes or sketches, click the button with the check sign in the icon bar of the virtual block.

   The "Note Manager" window is active again. Your notes are displayed in this window.

Working with the digital pen in offline mode

Proceed as follows:

1. Secure the base unit to a sheet of paper or a block.
2. Press the base unit button (D) until the display (C) is switched on.

   A number (e.g. 0) and a battery symbol are shown on the display.
3. Enter your notes.
4. To start a fresh page, press the base unit button.

   The number on the display is increased.
5. To switch the base unit off, press the base unit button until the display switches off.
6. Connect the base unit to your computer with the connection cable.
7. Start the "Note Manager" by selecting [Windows Start button] → "All programmes" → "Note Manager" → "Note Manager".

   The "Note Manager" window opens.
8. Open the "File" menu and click the "Upload" command.

   Your notes are uploaded onto the computer. You will then be asked whether you want to delete your notes from the base unit.
9. As these are now saved on your computer, you can confirm this with [Yes].

The icon bar of the virtual block

Open the Note Editor to edit your notes

Delete notes (empty the page)

Undo and redo

Change the colour and width of the pen

Copy notes to the clipboard to paste them into another programme

Print notes

Send notes inside the network

Send notes as an e-mail

Export notes as .jpg file

Save note in a specific folder

Convert notes into digital text with "MyScript Notes Lite"

Save note in the "Note Manager"

Discard note

Note Manager

The Note Manager user interface

The following figure shows the user interface of the "Note Manager" with an open note.

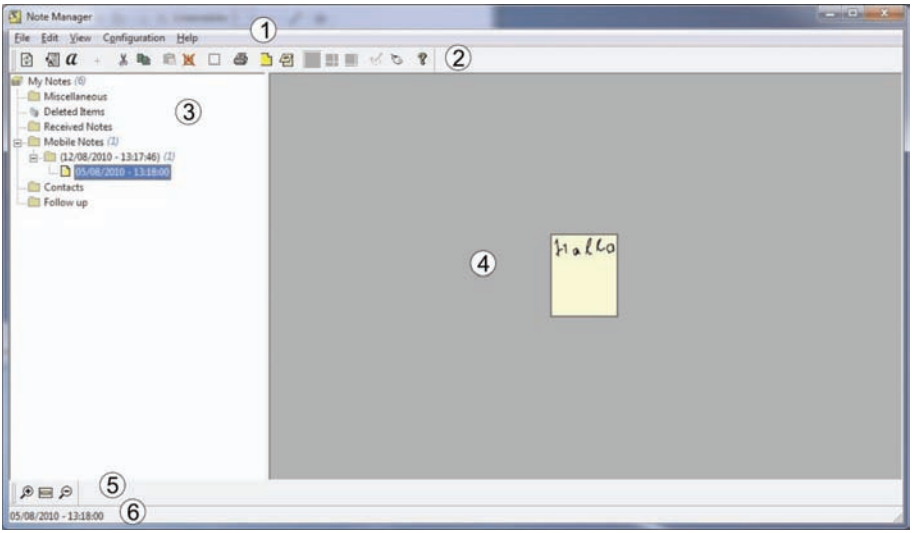

(1) Menu bar (refer to section below)

(2) Icon bar with buttons for frequently used functions. If you hover with the mouse pointer over a button on the icon bar, a so-called "tooltip" opens after a short time which describes the function of the button.

(3) You can organise your notes in the Note Explorer. The structure and functions of the Note Explorer are similar to those of the Windows Explorer. When you right-click on an element of the Note Explorer, a so-called context menu with menu commands appears.

(4) Note area (here with an open note)

(5) You can enlarge or shrink the view of the open note and restore its original size with the zoom buttons.

(6) Programme notes are displayed in the status bar.

The Note Manager menus

"File" menu	
Upload	Upload the notes which are saved on the base unit onto your computer.
Note into text	Open the note in a word processing programme. This menu item can only be selected in Windows Vista or Windows 7.
Convert to text	Convert note into text with "MyScript Notes Lite" This menu item can only be selected if "MyScript Notes Lite" is installed on your computer.
Join notes	Join the selected notes.
Move to ...:	Move the selected notes into an existing folder
Send to ...	Send the selected notes to another computer in the network or as an e-mail or e-mail attachment.
Import ...	Import a file with the extension ".pegvf"
Export ...	Export the note in the pegvf format
Set reminder	Assign a reminder to the selected note (day and time). As soon as this date/time arrives, the corresponding note is displayed on your computer screen.
Show as sticky note	The selected note is displayed as a sticky note on your screen and can be positioned as required. Right-click the sticky note to close it
Show as paper holder	The selected note is displayed in a window on your screen and can be positioned as required.
Properties	Display the name of the note, the creation date and its folder
New folder	Create a new folder in the Note Explorer
Empty deleted items	Empty the "Deleted items" folder
Print	Print selected notes
Print preview	Display the selected notes as a print preview.
Print setup …	Enter printer settings
Backup/Restore	Make a backup of the Note Manager database, for example on another drive, or restore a backed-up database.
Exit	Close the Note Manager

"Edit" menu	
Edit note	Open the note in a graphics programme similar to Windows Paint.
Cut	Cut the selected note to paste it to the clipboard
Copy	Copy the selected note to the clipboard
Paste	Paste the note to the clipboard
Rename	Rename the selected note
Find note	Search for the note on the basis of various criteria
Find next	Search for the next note which meets the search criteria
Select all	Select all the notes in the note area.
"View" menu	
Sort	Sort the notes by date or name
Small, medium or large thumbnails	Adjust the size of the notes on the note area
Zoom in, zoom to fit, zoom out	Display a larger view of the note, restore its original size or display a smaller view.
"Configuration" menu	
Detect hardware	Search for a connected base unit if the connection was interrupted.
Preferences	• Select the automatic save option for the note • Start the "Note Manager" with Windows? • Save sticky note before closing? • Page setup for printouts (notes per page, centre note on page) • Adjust the transparency of the paper holder.
Pen styles	Adjust the pen colour and width in pixels.
Set base unit orientation	Enter the position of the base unit on the paper (see the section "Attaching the base unit").
Set digital note mode	Select which mode (note or mouse mode) is set when the programme starts.
Mouse properties	Set the resolution in mouse mode. The higher the resolution, the more sensitive the response of the pen.
"Help" menu	
About Note Manager	Show programme information (versions)

Convert note to text

To convert handwritten notes into computer-legible text, proceed as follows:

1. Start "MyScript Notes Lite".
   In the Note Manager:
   - Select the note which you would like to convert to text.
   - In the "File" menu, click "Convert to text".

   In the "virtual block":
   - In the icon bar, click on a.

   When the programme starts, the following dialogue box opens:

MyScript Notes Lite - Registration
MyScript® Notes 2.2
Lite Version
MyScript Notes Lite is a limited version of MyScript Notes.
To learn about the limitations, please refer to the documentation.
Upgrade Now!
Registration Key
Enter registration key here:
Cancel
OK
Do not show this dialog box again.

   The registration code is printed on the "MyScript Notes Lite 2.2 for Silvercrest DGP1000" CD.

2. Enter the registration code and click [OK].

The following dialogue box is opened. This is where you enter the conversion settings.

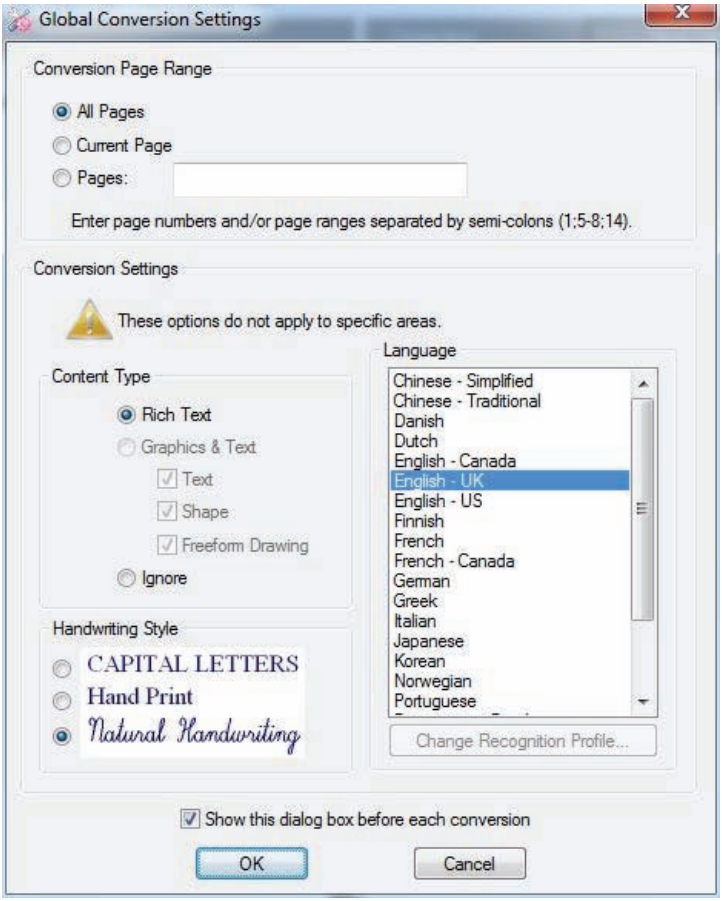

All pages:	Enter the page(s) which you would like to convert.
Content type:	In the "Lite" version you can only select between "Rich Text" and "Ignore".
Handwriting style:	Select the handwriting style you used for your note.
Language:	Select the language of the note.

3. Click [OK].
   Conversion then starts.

The "MyScript Notes Lite" screen opens.

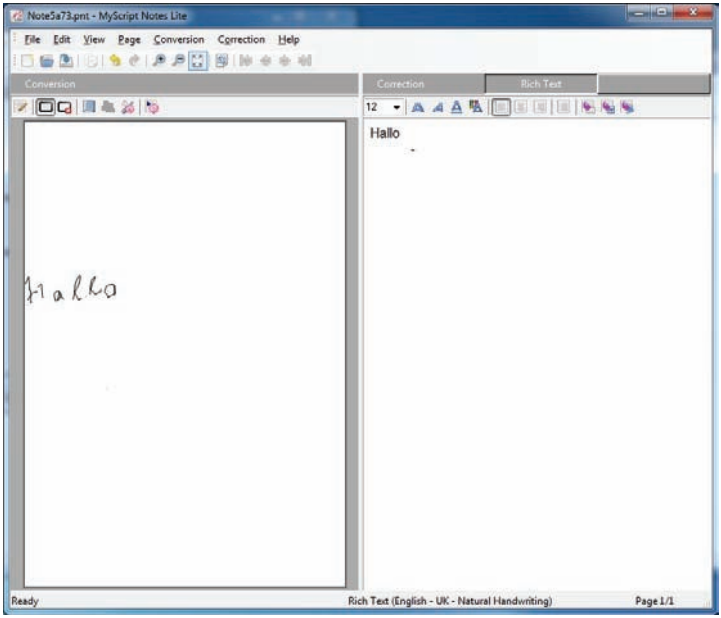

The note is shown on the left-hand side, the converted text on the right.

Further information on "MyScript Notes Lite" is given in the online help.

Troubleshooting

Problem	Possible cause	Remedy
The device is not recognised.	No USB connection	Check the USB connection. Remove and reinsert the USB connector. You can also try using a different USB socket on your computer.
No pen or mouse symbol is shown on the base unit display	• The pen batteries are empty. • The pen is not near the base unit	• Replace the pen batteries. • Move the pen closer to the base unit

Replacing the pen batteries

The warning symbol (⚠) on the pen informs you that the batteries must be inserted with the correct polarity.

Proceed as follows:

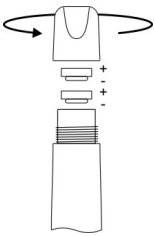

1. Unscrew the battery compartment cap (H).
2. Remove the used batteries.
3. Insert two batteries type SR41. The plus pole (+) of both batteries must always point upwards!
4. Screw the battery compartment cap on again.

Replacing the pen refill

Change the pen refill (F) when it runs out.

Proceed as follows:

⚠ Only insert a ballpoint pen refill into the pen which has the following dimensions:
Length 67 mm; cross-section 2.35 mm

1. Grip the refill (F) with the refill extractor (x) and pull the refill out of the pen.
2. Push a new refill (O) as far as possible into the pen.

Getting assistance

In case of a fault, please note the following:

- Support can be found for potential problems at the Silvercrest service portal (www.silvercrest.cc).
- You can also call our hotline (refer to the warranty condition at the end of this section). Please note that the hotline cannot carry out hardware and software training. The service personnel will support you by phone to help you remedy the problem. When calling the hotline, please have the following information to hand:
  - The serial number (S/N) of the device.
  - Your proof of purchase.

Licence terms – licence agreement

The licence terms of software explain the ways in which you are entitled to use the software. This already touches on a significant difference in the viewpoint of the customer/user and the manufacturer. While the customer/user thinks he has bought the software and thus owns it, the manufacturer of the software only sells/offers its customers a “restricted” right of use under specific circumstances. Ordinarily the software may only be used in conjunction with the purchased system. In addition, use may be restricted for commercial use. Under certain circumstances the software may not be used to control machines or for the development of weapons. The terms also contain restrictions with respect to the liability of the manufacturer.

If you do not fully agree with the licence agreement, then according to the manufacturer you are not entitled to use the respective software. Under certain circumstances individual clauses in the licence agreement may be questionable from a legal standpoint. This may mean that these are invalid and are then no longer binding for you. If you do not agree to the licence agreement, you may be entitled to return the software.

Please note that this right to return the software concerns the manufacturer of the software, not the manufacturer of the hardware. In this case you should contact the manufacturer of the software to exercise your right to return the software. Since your system was sold at a package price, a price evaluation of individual components and software components is not a part of the offer. Comparison prices are therefore intentionally not specifiable and for this reason the difference can also not be reimbursed.

Warranty information and hotline numbers

36 month warranty from date of purchase

UK

Important warranty information

SILVERCREST®

Dear Customer,

Thank you for purchasing a Silvercrest product.

We ask you to read carefully through the enclosed documentation or online help before putting your Silvercrest product into service. If you have a problem, which can not be solved in this way, please contact our hotline.

In case that trouble solving over the telephone is not possible, our hotline will arrange the service depending on the fault of the device. This will contain the elimination of defects by production and material at no charge.

Up-to-date information and answers to the most frequently asked questions are available on the internet from: www.silvercrest.cc

Please note that the warranty period for rechargeable batteries is 12 months.

This guarantee is valid in United Kingdom.

Your statutory guarantees from the seller are in addition to this warranty and are not limited by it.

BT

36 month warranty

Hotline number

0207 - 36 50 744

(Please have your serial number at hand!)

Manufacturer:

TARGA GmbH
Postfach 22 44
D-59482 Soest
www.silvercrest.cc

36 month warranty from date of purchase

Ireland

Important warranty information

SILVERCREST®

Dear Customer,

Thank you for purchasing a Silvercrest product.

We ask you to read carefully through the enclosed documentation or online help before putting your Silvercrest product into service. If you have a problem, which can not be solved in this way, please contact our hotline.

In case that trouble solving over the telephone is not possible, our hotline will arrange the service depending on the fault of the device. This will contain the elimination of defects by production and material at no charge.

Up-to-date information and answers to the most frequently asked questions are available on the internet from: www.silvercrest.cc

Please note that the warranty period for rechargeable batteries is 12 months.

This guarantee is valid in Ireland.

Your statutory guarantees from the seller are in addition to this warranty and are not limited by it.

BT

36 month warranty

Hotline number

01 - 242 15 83

(Please have your serial number at hand!)

Manufacturer:

TARGA GmbH
Postfach 22 44
D-59482 Soest
www.silvercrest.cc

Læs følgende anvisninger omhyggeligt, inden apparatet tages i brug første gang, også selv om du er fortrolig med elektroniske apparater.

Opbevar denne håndbog omhyggeligt til senere brug. Sørg også for, at denne vejledning følger med, hvis du giver apparatet videre til en anden.

⚠ Dette symbol henviser til mulige farer i forbindelse med brug af apparatet, som kan resultere i personskader eller materielle skader.

Registrerede varemærker – Registered trademark of -

IBM, IBM PC, PS/2 er registrerede varemærker der tilhører IBM Corporation eller IBM Deutschland GmbH.

USB er et registreret varemærke der tilhører USB Implementers Forum, Inc.

Microsoft og Windows er registrerede varemærker der tilhører Microsoft Corporation i USA og/eller andre lande.

CorelDRAW er et registreret varemærke der tilhører Corel Corporation

Indholdsfortegnelse

Pakkens indhold 42

Sikkerhedsanvisninger 43

Generelle sikkerhedsanvisninger 43
Korrekt anvendelse 43
Juridiske bestemmelser 43
Bemærkninger om overensstemmelse 44
Driftsomgivelser/omgivelsesbetingelser 44
Driftssikkerhed 44
Reparation 45
Rengøring 45
Bortskaffelse af udtjente apparater 45

Tekniske data 46

Produktbeskrivelse 47

Min. systemkrav 47
Software der medfølger ved levering 47
Betjeningselementer og tilslutninger 48

Ibrugtagning 49

Trin 1: Læg batterierne i den digitale pen 49
Trin 2: Sæt stiften i 49
Trin 3: Installer "Note Manager" 50
Trin 4: Installer "MyScript Notes Lite" 53
Trin 5: Tilslut modtageren 56
Trin 6: Start af "Note Manager" første gang 57

Betjening 59

Placering af modtageren 59
Sluk og tænd for modtageren 60
Symboler på displayet 61
Sådan holder du pennen 62
Sådan arbejder du med den digitale pen i online-funktion 63
Sådan arbejder du med den digitale pen i offline-funktion 64
Den virtuelle bloks værktøjslinje 65
Note Manager 66
Brugergrænsefladen i Note Manager 66
Menuerne i Note Manager 67
Konvertering af et notat til tekst 69

Fejlafhjælpning 72
Udskiftning af pennens batterier 72
Udskiftning af kuglepennens stift 73
Få hjælp 73
Licensbestemmelser - Licensaftale 74
Garantioplysninger og hotlinenumre 75

Pakkens indhold

	1 x modtager DGP1000-R
	1 x tilslutningskabel til modtager (USB-A-stik / mini-USB-stik)
	1 x digital pen DGP1000-P
	2 x batterier type SR41 (Varta V392, 1,55 V) til den digitale pen
	1 x reservestift til digital pen
	1 x stiftfjerner
	1 x cd "Note Manager for Silvercrest DGP1000" 1 x cd "MyScript Notes Lite 2.2 for Silvercrest DGP1000"
	1 x betjeningsvejledning

Sikkerhedsanvisninger

Generelle sikkerhedsanvisninger

- Elektriske apparater skal opbevares utilgængeligt for børn! Lad aldrig børn benytte elektriske apparater uden opsyn. De er ikke altid i stand til at vurdere mulige farer.
- Det kan være livsfarligt at sluge smådele. Vær også opmærksom på, at der er kvælningsfare, hvis luftveje tildækkes af emballagefolien.
- Nye apparater kan afgive en lugt i de første timer apparatet er i brug. Dette er uundgåeligt og lugten forsvinder ret hurtigt. Luft regelmæssigt ud i rummet, indtil lugten er forsvundet.

Korrekt anvendelse

Den digitale pen er et IT-apparat. Den anvendes korrekt, hvis den udelukkende anvendes til at tegne grafik eller skrive tekst med. Enhver anden anvendelse er ikke en korrekt anvendelse.

Producenten hæfter ikke hvis apparatet...

- ikke anvendes korrekt.
- anvendes når det er beskadiget eller modificeret.

Den digitale pen må kun bruges til private formål, og ikke i industrielt eller kommercielt øjemed.

Juridiske bestemmelser

- Apparatet må kun tilsluttes computere, som sikkerhedsteknisk og med hensyn til elektromagnetisk kompatibilitet og afskærmningskvalitet, svarer til dette apparat.
- Producent: TARGA GmbH, Postfach 2244, D-59482 Soest
- Der er 3 års garanti på apparatet fra købsdatoen. Garantibetingelserne finder du bagerst i denne håndbog. I forbindelse med garantikrav, skal du have købsbeviset til apparatet parat og ringe til vores hotline på (telefonnummer, se garantibetingelser).

Bemærkninger om overensstemmelse

Dette apparat opfylder fuldt ud kravene og forskrifterne i EMC-direktiv 2004/108/EC. Du finder overensstemmelseserklæringen bagerst i denne håndbog.

Dette apparat er i overensstemmelse med normerne EN 55022: 2006 og EN 55024: 1998 + A1: 2001 + A2: 2003.

Hvis du selv modificerer eller ændrer apparatet, er der ikke længere garanti for at disse normer bliver overholdt. Producenten hæfter ikke for skader, der er et resultat af ovennævnte modificeringer eller ændringer.

Driftsomgivelser/omgivelsesbetingelser

- Udsæt ikke apparatet for fugt og undgå rystelser, støv, varme og direkte sollys. Apparatet kan derved blive beskadiget.
- Apparatet må ikke anvendes i det fri, eller i regioner med tropisk klima.

Driftssikkerhed

- Læs og følg vejledningen til din computer, før du tilslutter den digitale pens modtager.
- Hvis apparatet udsættes for store temperatursvingninger, kan der som følge af kondensering dannes fugt, hvilket kan medføre en elektrisk kortslutning. I dette tilfælde, skal du vente med at tage apparatet i brug, indtil apparatet har nået omgivelsestemperaturen.
- Tag altid fat i stikket og ikke i ledningen, når du trækker stikket ud. Pas på, at der ikke kommer knæk på kablet. Læg kablet således, at ingen træder på det og det ikke er en hindring for nogen.
- Åbne brandkilder, som f.eks. brændende stearinlys, samt genstande der er fyldt med væske, f.eks. vaser eller drikkeglas, må ikke placeres ved siden af apparatet.
- Hold afstand til højfrekvente og magnetiske interferenskilder (f.eks. fjernsyn, mobiltelefoner, højttalerbokse) når apparatet bruges, for at undgå funktionsfejl.
- Brug kun batterier af samme type og med samme kapacitet. Sæt batterierne i, så polerne vender rigtigt. Tag batterierne ud, hvis du ikke bruger apparatet i længere tid, da batterierne ellers kan lække. Kontakt med huden forårsager ætsninger. Derfor skal batterier der lækker, altid tages ud med syrefaste beskyttelseshandsker.
- Forsøg ikke at genoplade batterierne og kast dem under ingen omstændigheder ind i åben ild (eksplosionsfare).
- Tænk på miljøet. Brugte batterier må ikke smides i husholdningsaffaldet. De skal afleveres på et indsamlingssted for brugte batterier.

Reparation

En reparation er nødvendig, hvis der er trængt væske ind i husets indvendige del, hvis huset er beskadiget, eller apparat ikke længere fungerer.

⚠ Apparatet må ikke åbnes. Overlad udelukkende reparationer til kvalificeret faglært, service- eller vedligeholdelsespersonale!

Rengøring

⚠ Kobl modtageren fra computeren, før den rengøres.

Modtageren skal altid være ren. I modsat fald, er der ingen garanti for at den fungerer korrekt.

Rengør modtageren med en tør klud hvis den er snavset. Ved hårdnakket snavs rengøres den med en let fugtet klud. Brug ikke opløsningsmidler, ætsende eller gasformige rengøringsmidler. Der må ikke komme fugt ind i modtageren.

Bortskaffelse af udtjente apparater

I henhold til direktiv 2002/96/EC om affald af elektrisk og elektronisk udstyr, må affald af elektrisk og elektronisk udstyr ikke længere bortskaffes som kommunalt affald. Bortskaf venligst udelukkende dette produkt på en lokal genbrugsplads i din nærhed, når det er udtjent.

Ved korrekt bortskaffelse af udtjente apparater, forhindres sundhedsskadelige påvirkninger, samt skader på miljøet.

Tekniske data

Model	DGP1000
Teknologi	Infrarød og ultralyd
Mål	
Modtager	77,5 x 34 x 13 mm (L x B x H)
Pen	141 x 16 mm
Vægt	
Modtager	25 g
Pen	17,5 g (med batterier)
Strømforsyning	
Modtager	Via USB-indgang (maks. 80 mA, 0,4 W)
Pen	Via batteri (2 x 1,55 V, type SR41)
Opløsning	1000 dpi (dots per inch)
Tilbagemelding	58 rps (reports per second)
Modtager	
Hukommelse	2 MB til ca. 100 DIN-A4-sider
Sidetællervisning	op til 199 sider
Driftsbetingelser	
Temperatur	5 - 35 °C
Luftfugtighed	maks. 85 % rel. fugtighed

Produktbeskrivelse

Dine skrivebevægelser med den digitale pen på et normalt ark papir, registreres via modtageren og gemmes som vektorgrafik. Denne grafik kan du overføre til din computer og redigere, arkivere, eller sende som e-mail.

Den digitale pen kan bruges "online" og "offline":

Online: Modtageren er forbundet med computeren via dens tilslutningskabel. Dine notater overføres og vises på computeren samtidig.

Offline: Modtageren bruges uden computer. Dine notater gemmes i modtagerens 2 MB store hukommelse. Når du tilslutter modtageren til en computer, kan du overføre dit notat fra den interne hukommelse til computeren.

Min. systemkrav

- Pc fra Pentium 3-processor med 1 GHz og USB-indgang
- 50 MB ledig hukommelse på harddisken
- 256 MB RAM
- Grafikkort med 32-Bit-farvedybde
- Skærm med skærmopløsning på 1024 x 768 pixel
- Cd- eller DVD-drev til installation af software
- Operativsystem Windows® XP (SP2), Windows® Vista eller Windows® 7

Software der medfølger ved levering

- **Note Manager** er den digitale pens programsoftware, du skal bruge for at kunne skrive med den digitale pen.
- **MyScript Notes Lite** er et program, du kan konvertere de håndskrevne notater du har skrevet med den digitale pen, til digital tekst med, for f.eks. at redigere teksten med et tekstbehandlingsprogram.

Betjeningselementer og tilslutninger

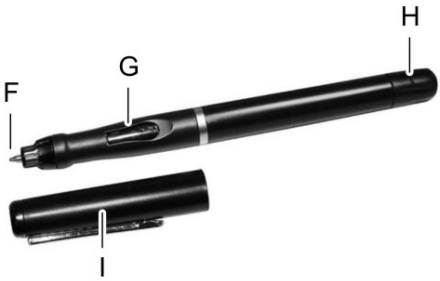

Modtager	Digital pen
A: Monteringsclips	F: Penstift
B: Indgang til USB-kabel	G: Pentast til pc-mus-funktioner
C: Display	H: Hætte til batterirum
D: Modtagertast	I: Hætte til pen
Online-funktion	
Skift mellem mus- og notattilstand	
Offline-funktion	
Tryk kortvarigt på tasten: Læg et nyt ark papir på	
Tryk på tasten og hold den nede: Tænd eller sluk for modtageren	
E: Sensorer	

Bemærk:

Pennen har ingen tænd-/slukkontakt. Den tænder af sig selv, når hætten til pennen (I) er trukket af og slukker, når den sættes på igen.

Ved offline-funktion slukker modtageren automatisk, hvis der i løbet af 10 minutter ikke modtages signaler fra pennen. Tryk på modtagertasten (D), for at tænde for modtageren igen.

Ibrugtagning

Følg de trin der er vist nedenfor, når den digitale pen tages i brug, for hurtigt at komme i gang med at bruge den uden problemer.

Trin 1: Læg batterierne i den digitale pen

OBS-symbolet (⚠) på pennen henviser til, at batterierne skal sættes i, så polerne vender rigtigt.

Sådan gør du:

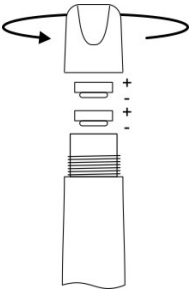

1. Skru hætten til batterirummet (H) af.
2. Læg to batterier af typen Varta V392 i.

   Plus-polen (+) på begge batterier skal vende opad!
3. Skru hætten til batterirummet på igen.

Trin 2: Sæt stiften i

Sådan gør du:

1. Sæt en ny stift (F) i og tryk den så langt ind den kan komme.

⚠ Sæt kun stifter i pennen der har følgende mål: Længde 67 mm; tværsnit 2,35 mm

Reservestifter kan købes i en butik der sælger kontorartikler, ved fremvisning af den gamle stift.

Hvordan du udskifter stiften når den ikke kan skrive længere, er beskrevet i kapitlet "Fejlafhjælpning".

Trin 3: Installer "Note Manager"

"Note Manager" er den digitale pens programsoftware, uden hvilken du ikke kan bruge den digitale pen.

Sådan gør du:

1. Læg "Note Manager-cd'en i dit cd-drev.

   Installationsprogrammet starter som regel automatisk. Hvis ikke, skal du gøre følgende:

   - Åbn (fil-)Explorer (højre museklik på [Start] → menuen "Explorer").
   - Klik på dit cd- eller DVD-drevs symbol i objekttræet.
   - Dobbeltklik på filen "setup" (opsætning).

2. Vælg det sprog, installationen skal gennemføres på, og klik på [OK].

"InstallShield Wizard" vises:

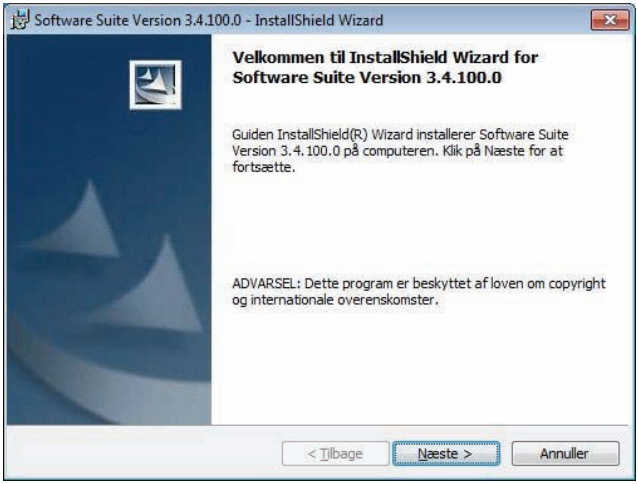
Software Suite Version 3.4.100.0 - InstallShield Wizard
Velkommen til InstallShield Wizard for Software Suite Version 3.4.100.0
Guiden InstallShield(R) Wizard installerer Software Suite Version 3.4.100.0 på computeren. Klik på Næste for at fortsætte.
ADVARSEL: Dette program er beskyttet af loven om copyright og internationale overenskomster.
< Tilbage
Næste >
Annuller

3. Klik på [Næste] for at fortsætte installationen.

   I den næste dialog kan du ændre destinationsmappen til programmet. Vi anbefaler, at den viste standardplacering ikke ændres.

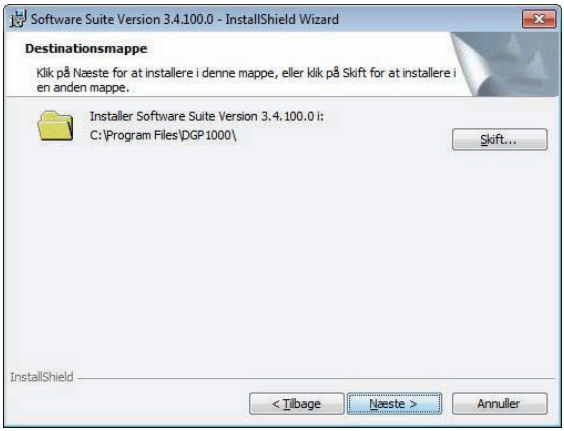
Software Suite Version 3.4.100.0 - InstallShield Wizard
Destinationsmappe
Klik på Næste for at installere i denne mappe, eller klik på Skift for at installere i en anden mappe.
Installer Software Suite Version 3.4.100.0 i:
C:\Program Files\DGP1000\
Skift...
InstallShield
< Tilbage
Næste >
Annuller

4. Klik på [Næste] igen.

   Der vises en ny dialog.

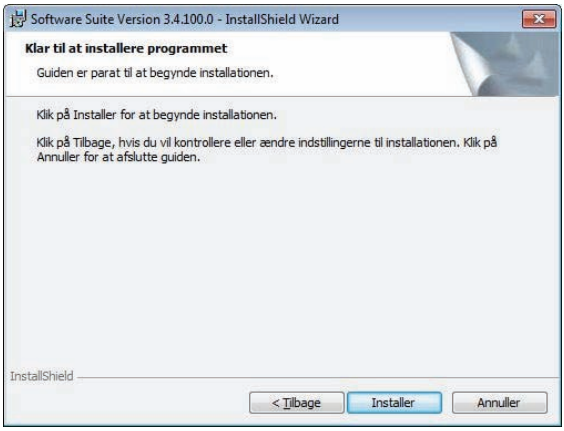
Software Suite Version 3.4.100.0 - InstallShield Wizard
Klar til at installere programmet
Guiden er parat til at begynde installationen.
Klik på Installer for at begynde installationen.
Klik på Tilbage, hvis du vil kontrollere eller ændre indstillingerne til installationen. Klik på Annuller for at afslutte guiden.
InstallShield
< Tilbage
Installer
Annuller

5. Klik på [Installer] for at begynde installationen.

   Den næste dialog viser installationsprocessen. Når installationen er afsluttet, vises følgende dialog:

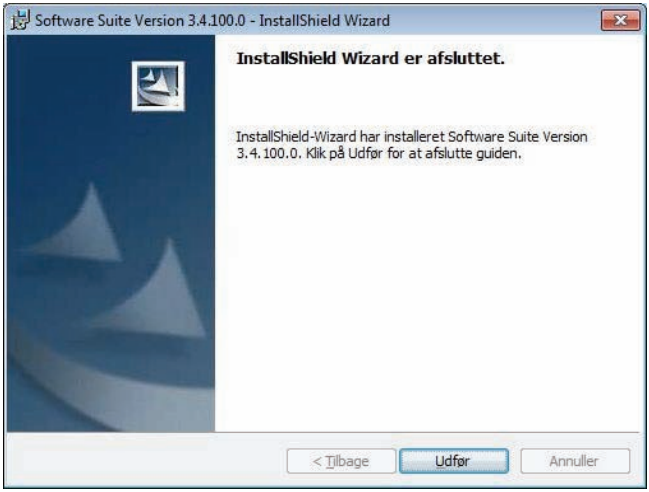
Software Suite Version 3.4.100.0 - InstallShield Wizard
InstallShield Wizard er afsluttet.
InstallShield-Wizard har installeret Software Suite Version 3.4.100.0. Klik på Udfør for at afslutte guiden.
< Tilbage
Udfør
Annuller

6. Klik på [Udfør].

   Installationsguiden afsluttes. Det er ikke nødvendigt at genstarte computeren.

Trin 4: Installer "MyScript Notes Lite"

"MyScript Notes Lite" er et program med hvilket, du kan konvertere de notater du har skrevet med den digitale pen, til digital tekst med, for f.eks. at redigere teksten med et tekstbehandlingsprogram. Denne installation er valgfri.

Sådan gør du:

1. Læg "MyScript Notes Lite"-cd'en i dit cd-drev.

   Installationsprogrammet starter som regel automatisk. Hvis ikke, skal du gøre følgende:

   - Åbn (fil-)Explorer (højre museklik på [Start] → menuen "Explorer").
   - Klik på dit cd- eller DVD-drevs symbol i objekttræet.
   - Dobbeltklik på filen "setup" (opsætning).

2. Vælg installationssproget og klik på [Næste].

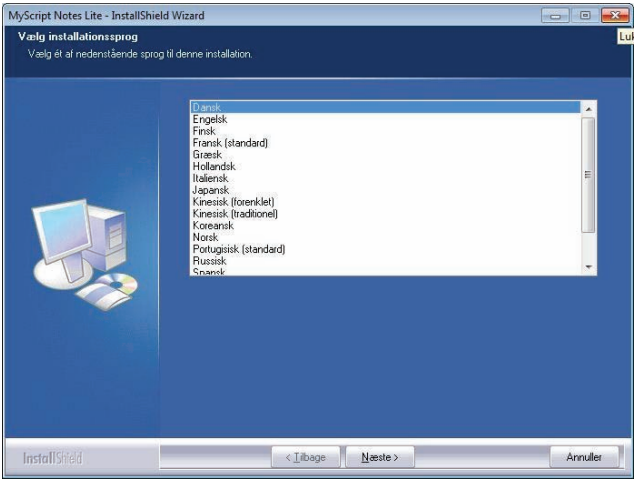

"InstallShield Wizard" vises:

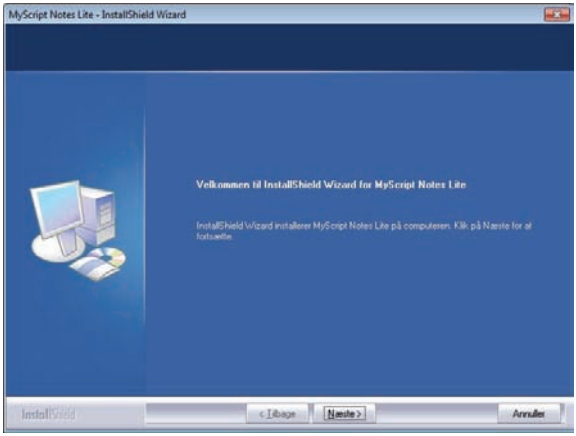
MyScript Notes Lite - InstallShield Wizard
Velkommen til InstallShield Wizard for MyScript Notes Lite
InstallShield Wizard installerer MyScript Notes Lite på computeren. Klik på Næste for at fortsætte.
InstallShield
< Tilbage
Næste >
Annuller

3. Klik på [Næste] for at fortsætte installationen.

   Licensaftalen vises:

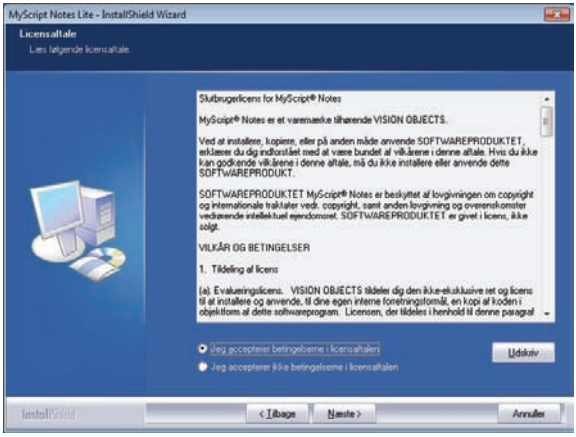
MyScript Notes Lite - InstallShield Wizard
Licensaftale
Læs følgende licensaftale.
Slutbrugerlicens for MyScript® Notes
MyScript® Notes er et varemærke tilhørende VISION OBJECTS.
Ved at installere, kopiere, eller på anden måde anvende SOFTWAREPRODUKTET, erklærer du dig indforstået med at være bundet af vilkårene i denne aftale. Hvis du ikke kan godkende vilkårene i denne aftale, må du ikke installere eller anvende dette SOFTWAREPRODUKT.
SOFTWAREPRODUKTET MyScript® Notes er beskyttet af lovgivningen om copyright og internationale traktater vedr. copyright, samt anden lovgivning og overenskomster vedrørende intellektuel ejendomsret. SOFTWAREPRODUKTET er givet i licens, ikke solgt.
VILKÅR OG BETINGELSER
1. Tildeling af licens
(a). Evalueringslicens. VISION OBJECTS tildeler dig den ikke-eksklusive ret og licens til at installere og anvende, til dine egen interne forretningsformål, en kopi af koden i objektform af dette softwareprogram. Licensen, der tildeles i henhold til denne paragraf
Jeg accepterer betingelserne i licensaftalen
Jeg accepterer ikke betingelserne i licensaftalen
Udskriv
InstallShield
< Tilbage
Næste >
Annuller

4. Læs licensbetingelserne. Hvis du accepterer betingelserne, skal du markere feltet "Jeg accepterer betingelserne i licensaftalen". Klik derefter på [Næste].

   I den næste dialog kan du ændre destinationsmappen til programmet. Vi anbefaler, at den viste standardplacering ikke ændres.

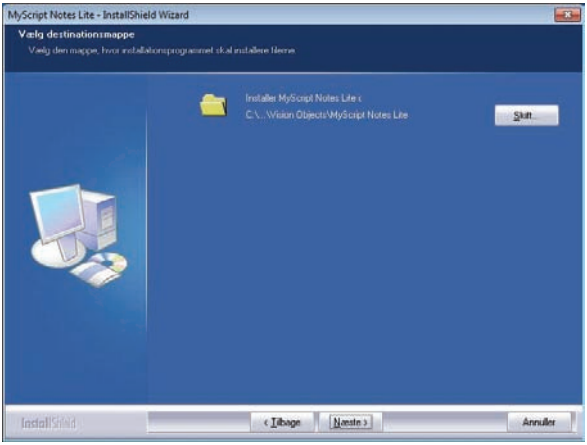

5. Klik på [Næste] igen.

   Den næste dialog viser installationsprocessen. Når installationen er afsluttet, vises følgende dialog:

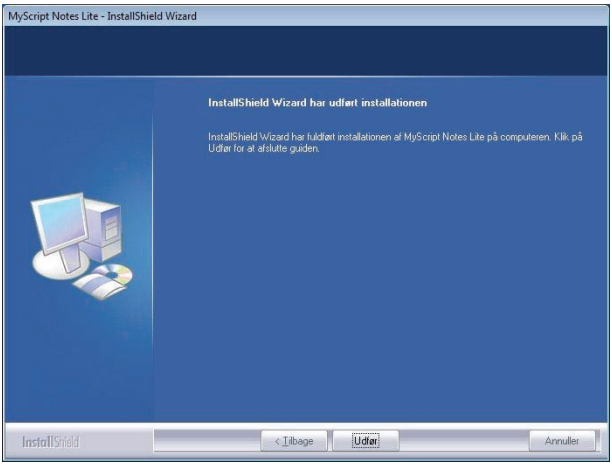
MyScript Notes Lite - InstallShield Wizard
InstallShield Wizard har udført installationen
InstallShield Wizard har fuldført installationen af MyScript Notes Lite på computeren. Klik på Udfør for at afslutte guiden.
InstallShield
< Tilbage
Udfør
Annuller

6. Klik på [Udfør].

   Installationsguiden afsluttes. Det er ikke nødvendigt at genstarte computeren.

Trin 5: Tilslut modtageren

Du tilslutter modtageren til computeren, for at ..

- indlæse notater i online-funktion, der samtidig vises på computeren.
- overføre notater til computeren.
- oplade modtagerens interne batteri.

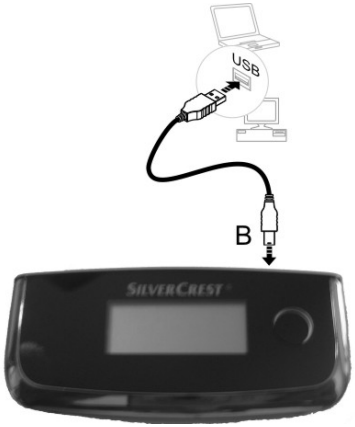

Sådan gør du:

1. Forbind USB-stikket (B) på modtageren med en ledig USB-indgang på din computer via tilslutningskablet.

   Efter kort tid vises "Ny hardware fundet ...".

   Den digitale pens modtager er genkendt af din computer. Den kan dog først bruges, når applikationen "Note Manager" er startet.

Bemærk: Modtageren forsynes med strøm via et internt batteri, der oplades via et USB-interface. Batteriet er fuldt opladet, når der vises et batterisymbol med tre bjælker i displayet (C).

Hvis modtageren ikke genkendes, så træk USB-stikket ud og sæt det i igen. Anvend eventuelt en anden USB-indgang på pc'en.

Trin 6: Start af "Note Manager" første gang

Sådan gør du:

1. Start applikationen "Note Manager" via [Windows-starttast] → "Alle programmer" → "Note Manager" → "Note Manager", eller via "Note Manager"-ikonet på din desktop.

   Bemærk: Hvis du får en sikkerhedsadvarsel fra Windows Firewall, skal du klikke på knappen [Fjern blokering]. I modsat fald, kan du ikke bruge Send til-funktionerne (f.eks. til e-mails).

   Dialogen "Indstil tilstand" vises.

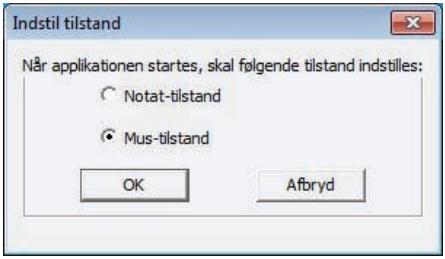

2. Marker feltet "Notat-tilstand", hvis du vil lave notater, eller tegne skitser med den digitale pen, efter applikationen er startet.

   Marker feltet "Mus-tilstand", hvis du vil arbejde med den digitale pen som en mus, efter applikationen er startet. Det vil sige:

   - Du placerer musemarkøren ved at bevæge pennen en smule hen over papiret, uden at røre ved det.
   - Du laver et venstre museklik ved at røre papiret let med pennen, eller trykke på pentasten (G).

   Tip: Disse indstillinger kan du til enhver tid tilpasse i "Note Manager" (menuen "Konfiguration" → "Indstil Mus-Notat-tilstand").

3. Luk dialogen ved at trykke på [OK].

Følgende dialog åbnes:

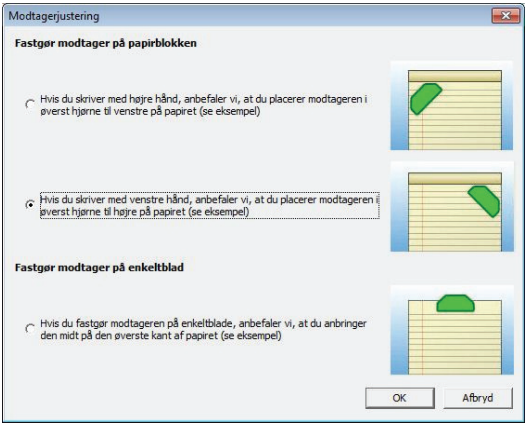
Modtagerjustering
Fastgør modtager på papirblokken
Hvis du skriver med højre hånd, anbefaler vi, at du placerer modtageren i øverst hjørne til venstre på papiret (se eksempel)
Hvis du skriver med venstre hånd, anbefaler vi, at du placerer modtageren i øverst hjørne til højre på papiret (se eksempel)
Fastgør modtager på enkeltblad
Hvis du fastgør modtageren på enkeltblade, anbefaler vi, at du anbringer den midt på den øverste kant af papiret (se eksempel)
OK
Afbryd

4. Markeret feltet med den ønskede modtagerjustering og fastgør den på skriveunderlaget, som vist ovenfor.

> **Tip:** Disse indstillinger kan du til enhver tid tilpasse i "Note Manager" (menuen "Konfiguration" → "Indstil Modtagerjustering").

Du finder yderligere oplysninger i kapitlet "Betjening".

5. Klik på [OK].

Vinduet "Note Manager" åbnes. I dette vindue kan du organisere dine notater.

Betjening

Placering af modtageren

Modtageren fastgøres på et enkelt ark papir eller en papirblok med en monteringsclips (A).

Den optimale placering af modtageren, er midt på den øverste kant af papiret eller papirblokken

Hvis denne placering ikke er mulig, på grund af papirblokkens beskaffenhed, kan du fastgøre modtageren på siden af papirblokken, dvs.: i øverste hjørne til venstre, hvis du skriver med højre hånd, eller i øverste hjørne til højre, hvis du skriver med venstre hånd.

1. Fastgør modtageren på papiret.
2. Klik i menuen "Konfiguration" på "Indstil modtagerjustering".
3. Marker feltet med den aktuelle modtagerjustering i den følgende dialog, og luk dialogen ved at trykke på [OK].

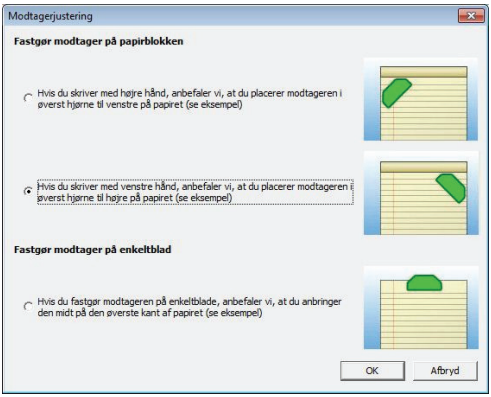
Modtagerjustering
Fastgør modtager på papirblokken
Hvis du skriver med højre hånd, anbefaler vi, at du placerer modtageren i øverst hjørne til venstre på papiret (se eksempel)
Hvis du skriver med venstre hånd, anbefaler vi, at du placerer modtageren i øverst hjørne til højre på papiret (se eksempel)
Fastgør modtager på enkeltblad
Hvis du fastgør modtageren på enkeltblade, anbefaler vi, at du anbringer den midt på den øverste kant af papiret (se eksempel)
OK
Afbryd

Bemærk: Hvis modtagerens faktiske placering ikke stemmer overens med ovennævnte, fungerer den digitale pen ikke korrekt.

Sluk og tænd for modtageren

- Online-funktion:

  Så snart modtageren er tilsluttet en pc (online-funktion), tænder den automatisk.

- Offline-funktion:

  Tryk på modtagertasten (D) og hold den nede, indtil et tal og batterisymbolet vises på displayet, eller indtil visningen slukkes, for at tænde eller slukke for modtageren i offline-funktion.

  Ved offline-funktion slukker modtageren automatisk, hvis der i løbet af 10 minutter ikke modtages signaler fra pennen. Tryk på modtagertasten for at tænde for modtageren igen.

Symboler på displayet

Modtageren er forbundet med en computer.

Symbolet blinker, når data overføres til computeren.

Hukommelsen er 90% fuld. Overfør dataene til en computer og slet modtagerens interne hukommelse.

Penbatteriernes niveau er lavt og batterierne skal udskiftes.

Batteriernes tilstand i modtageren; 3 bjælker: fuld; 0 bjælker: tomt

Notat-tilstand aktiv. Du kan indlæse notater.

Mus-tilstand aktiv. Du kan arbejde med den digitale kuglepen som med en computermus.

Antal sider gemt i hukommelsen (her 188 sider).

Sådan holder du pennen

- Skriv med den digitale pen som med en normal pen. Pennens vinkel bør være mellem 45° og 90°.
- Der skal altid være "visuel kontakt" mellem pennens spids og modtageren. Placer derfor ikke din hånd mellem modtageren og pennen.
- Hvis du på et senere tidspunkt vil konvertere dine notater til digital tekst med programmet "MyScript Notes Lite", for f.eks. at redigere teksten med et tekstbehandlingsprogram, skal du skrive ensartet og så vandret som muligt.

Sådan arbejder du med den digitale pen i online-funktion

Sådan gør du:

1. Tilslut modtageren til en ledig USB-indgang på din computer via tilslutningskablet.
2. Fastgør modtageren på et ark papir eller på en papirblok.
3. Start applikationen "Note Manager" via [Windows-starttast] → "Alle programmer" → "Note Manager" → "Note Manager".

   Vinduet "Note Manager" åbnes.
4. Tryk én gang på modtagertasten (D), hvis Mus-tilstand er aktiveret (pc-mus på displayet).

   I Notat-tilstand vises en pen på displayet. Så snart du rører papiret med pennen, vises en virtuel blok og en værktøjslinje på skærmen.

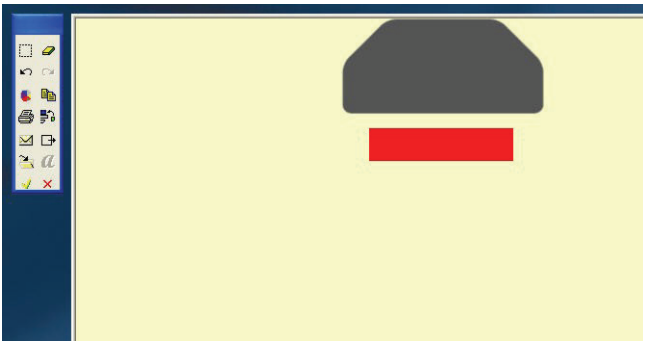

Tip: Du kan også skifte frem og tilbage mellem mus- og notat-tilstand, ved kortvarigt at røre det firkantede område i skærmbilledet med pennen.

Du finder informationer om værktøjslinjesymbolernes funktioner i kapitlet "Den virtuelle bloks værktøjslinje".

5. Indlæs dine notater.
6. Klik på knappen med fluebenet i den virtuelle bloks værktøjslinje, for at gemme dine notater.

   Vinduet "Note Manager" aktiveres igen. Her vises dine notater.

Sådan arbejder du med den digitale pen i offline-funktion

Sådan gør du:

1. Fastgør modtageren på et ark papir eller på en papirblok.
2. Tryk på modtagertasten (D), indtil displayet (C) tændes.

   På displayet vises et tal (f.eks. 0) og et batterisymbol.
3. Indlæs dine notater.
4. Tryk på modtagertasten for at lægge et nyt ark papir på.

   Tallet på displayet øges.
5. For at slukke for modtageren, skal du trykke på modtagertasten og holde den nede, indtil displayet slukkes.
6. Tilslut modtageren til din computer via tilslutningskablet.
7. Start applikationen "Note Manager" via [Windows-starttast] → "Alle programmer" → "Note Manager" → "Note Manager".

   Vinduet "Note Manager" åbnes.
8. Åbn menuen "Fil" og klik på menukommandoen "Upload".

   Dine notater overføres til computeren. Derefter bliver du spurgt, om notaterne i modtageren skal slettes.
9. Notaterne er overført til computeren, derfor kan du besvare dette spørgsmål med [Ja].

Den virtuelle bloks værktøjslinje

Åbn Note-Editor for at redigere notater

Slet notater (tøm papirark)

Fortryd sidste handling og gendan

Skift stiftfarve og -bredde

Kopier notater til udklipsholder for at indsætte dem i et andet program

Udskriv notater

Send notater i netværk

Send notater som e-mail

Eksporter notat som jpg-fil

Gem notat i en bestemt mappe

Konverter notater til digital tekst via "MyScript Notes Lite"

Gem notat i "Note Manager"

Slet notat

Note Manager

Brugergrænsefladen i Note Manager

Det næste billede viser brugergrænsefladen i "Note Manager" med et åbnet notat.

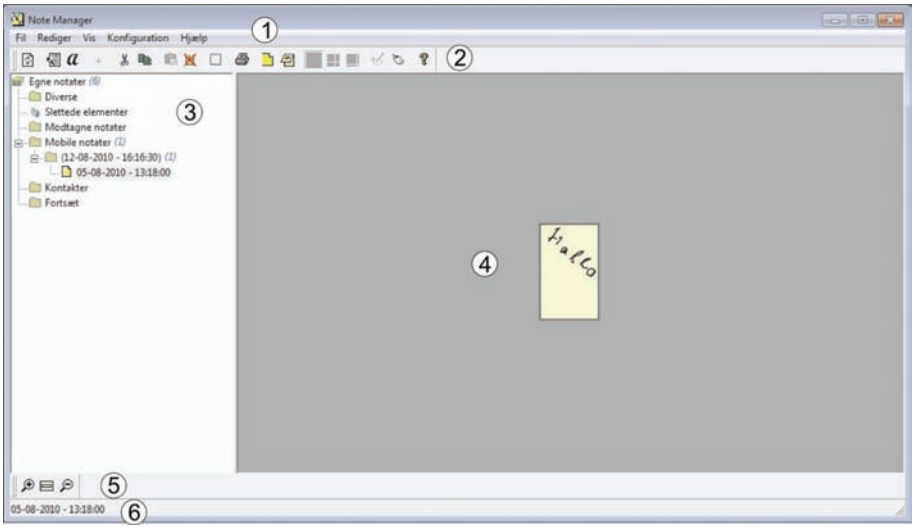

(1) Menulinje (se afsnittet nedenfor)

(2) Værktøjslinje med knapper til hyppigt anvendte funktioner. Hvis du placerer musemarkøren på en knap i værktøjslinjen, vises kort efter et såkaldt "Tooltip" (værktøjstip), med oplysninger om knappens funktion.

(3) Via Notat-Explorer kan du administrere dine notater. Opbygningen og funktionerne i Notat-Explorer kan sammenlignes med dem i Windows Explorer. Hvis du klikker på et Notat-Explorer-element med højre musetast, vises en såkaldt kontekstmenu med menukommandoer.

(4) Notatområde (her med et åbnet notat)

(5) Du kan forstørre det åbnede notat med zoom-knapperne, nulstille det til den oprindelige størrelse, eller formindske det.

(6) I statuslinjen vises oplysninger om programmet.

Menuerne i Note Manager

Menuen "Fil"	
Upload	Overførsel af gemte notater på modtageren til computeren.
Notat til tekst	Åbn notatet i et tekstbehandlingsprogram. Denne menukommando kan kun vælges i Windows Vista eller Windows 7.
Konverter til tekst	Konverter notat til tekst via "MyScript Notes Lite". Denne menukommando kan kun vælges, hvis "MyScript Notes Lite" er installeret på din computer.
Flet notater	Flet markerede notater.
Forskyd til...	Flyt markerede notater til en eksisterende mappe
Send til ...	Send markerede notater til en anden computer i netværket, eller som e-mail eller vedhæftning til en e-mail.
Importer ...	Importer fil med suffiks ".pegvf"
Eksporter ...	Eksporter notatet i pegvf-format
Indstil påmindelse	Tildel et markeret notat en påmindelse (dag og klokkeslæt). Så snart den tildelte dag/klokkeslæt nås, vises det pågældende notat på din skærm.
Vis som huskeseddel	Det markerede notat vises som en notesblok som kan placeres et vilkårligt sted på skærmen. Klik på notesblokken med højre musetast for at lukke den.
Vis i vinduet	Det markerede notat vises i et vindue og kan placeres et vilkårligt sted på skærmen.
Egenskaber	Vis notatnavn, oprettelsesdato og mappe
Ny mappe	Opret ny mappe i Notat-Explorer
Tøm slettede elementer	Tøm mappen "Slettede elementer"
Udskriv	Udskriv markerede notater
Oversigtsbillede	Vis markerede notater før udskrivning.
Opret printer:	Udfør printerindstillinger
Gem/genopret	Sikkerhedskopier Note Manager-databasen på f.eks. et andet drev, eller gendan en sikkerhedskopieret database.
Afslut	Afslut Note Manager

Menuen "Rediger"	
Rediger notat	Åbn notatet i et grafikprogram, som f.eks. Windows Paint.
Klip	Anvend det markerede notat til flytning til udklipsholder
Kopier	Kopier det markerede notat til udklipsholder
Sæt ind	Indsæt notatet i udklipsholder
Omdøb	Omdøb det markerede notat
Søg notat	Søg et notat efter diverse kriterier
Søg videre	Søg efter det næste notat, der opfylder søgekriterierne
Vælg alt	Vælg alle notater i notatområdet.
Menuen "Vis"	
Sorter	Sorter notater efter dato eller navn
Små, mellemstore eller store miniaturebilleder	Indstil notaternes størrelse til notatområdet
Zoom ind, tilpas zoom, zoom ud	Vis det åbnede notat forstørret, nulstil det til dets oprindelige størrelse, eller formindsk det.
Menuen "Konfiguration"	
Identificer hardware	Søg efter en tilsluttet modtager, hvis forbindelsen til modtageren blev afbrudt.
Indstillinger	• Indstil automatisk arkivering af notatet • Start "Note Manager" med Windows? • Gem notat efter afslutning? • Sideopsætning til udskrivninger (notat pr. side, centrer notat på side) • Indstil papirholderens transparens.
Blyantstype (Pentype)	Indstil pennens stiftfarve og -bredde i pixel.
Indstil modtagerjustering	Indstil modtagerens placering på papiret (se afsnittet "Placering af modtageren").
Indstilling af tilstand (Indstil notat-/mus-tilstand)	Indstil hvilken tilstand (notat- eller mus-tilstand), der skal være indstillet når programmet startes.
Egenskaber for mus-tilstand... (Mus-egenskaber)	Indstil opløsningen i mus-tilstand. Jo højere opløsning der vælges, desto mere følsomt reagerer pennen.
Menuen "Hjælp"	
Via Note Manager	Vis programinformationer (versioner)

Konvertering af et notat til tekst

Benyt følgende fremgangsmåde for at konvertere håndskrevne notater til tekst, der kan læses af en computer:

1. Start "MyScript Notes Lite".
   I Note Manager:
   - Marker det notat, du vil konvertere til tekst.
   - Klik på "Konverter til tekst" i menuen "Fil".

   I den "virtuelle blok":
   - Klik på a i værktøjslinjen.

   Når programmet startes, vises følgende dialog:

   Registreringsnøglen finder du på cd'en "MyScript Notes Lite 2.2 for Silvercrest DGP1000".

2. Indtast registreringsnøglen og klik på [OK].

Følgende dialog vises. Her indtaster du konverteringsindstillingerne.

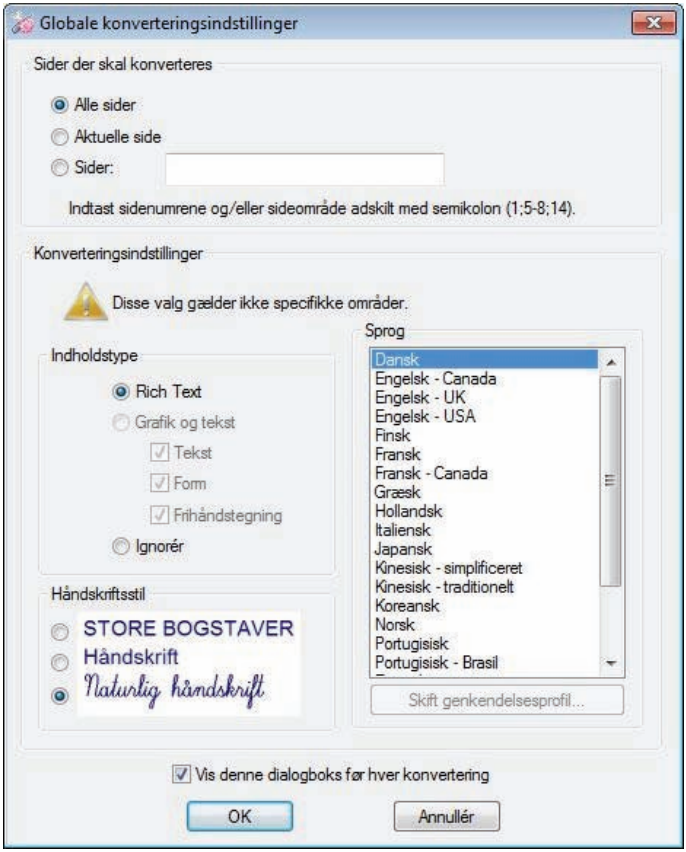

Alle sider: Indtast hvilke(n) side(r) du vil konvertere.

Indholdstype: I "Lite"-versionen, kan du kun vælge "Rich-Text" og "Ignorér".

Håndskriftsstil: Vælg hvilken håndskrift du har skrevet notatet med.

Sprog: Her kan du vælge notatets sprog.

3. Klik på [OK].
   Konverteringen startes.

"MyScript Notes Lite"-skærmbilledet vises.

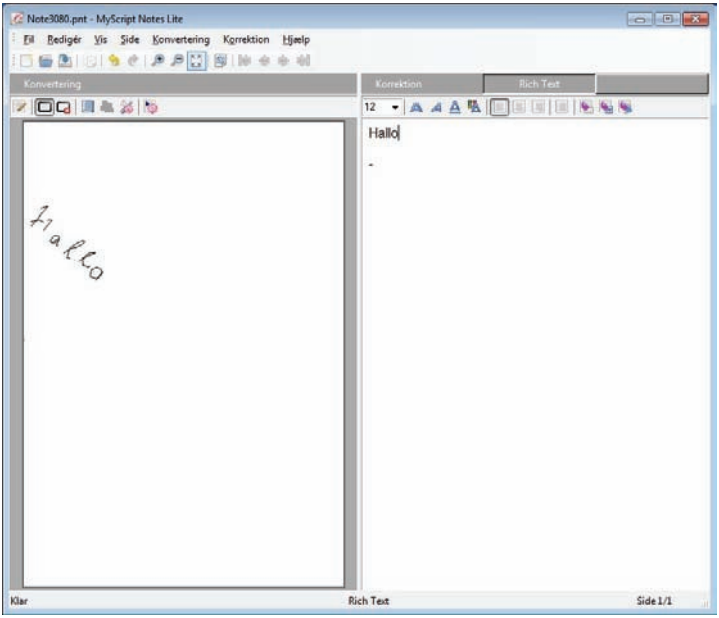

I venstre side vises notatet, og i højre side den konverterede tekst.

Du finder yderligere informationer om "MyScript Notes Lite" i online-hjælp.

Fejlafhjælpning

Problem:	Mulig årsag	Afhjælpning
Apparatet genkendes ikke.	Ingen USB-forbindelse	Kontroller USB-forbindelsen. Træk USB-stikket ud og sæt det i igen. Anvend eventuelt en anden USB-indgang på computeren.
På modtagerens display vises hverken et pen- eller et mussymbol.	• Pennens batterier er afladede. • Pennen er ikke i nærheden af modtageren	• Udskift pennens batterier. • Placer pennen tættere ved modtageren

Udskiftning af pennens batterier

OBS-symbolet (⚠) på pennen henviser til, at batterierne skal sættes i, så polerne vender rigtigt.

Sådan gør du:

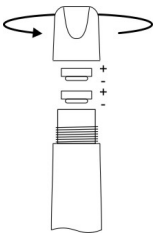

1. Skru hætten til batterirummet (H) af.
2. Tag de brugte batterier ud.
3. Sæt to batterier af typen SR41 i. Plus-polen (+) på begge batterier skal vende opad!
4. Skru hætten til batterirummet på igen.

Udskiftning af kuglepennens stift

Udskift stiften (F), hvis den ikke længere kan skrive.

Sådan gør du:

⚠ Sæt kun stifter i pennen der har følgende mål: Længde 67 mm; tværsnit 2,35 mm

1. Tag fat i stiften (F) med stiftfjerneren (x) og træk stiften ud af pennen.
2. Sæt en ny stift i, og skub den ind, indtil den ikke kan komme længere.

Få hjælp

I tilfælde af en fejl, skal du være opmærksom på følgende:

- I Silvercrest-serviceportalen (www.silvercrest.cc), finder du hjælp til eventuelle problemer.
- Alternativt, kan du også kontakte vores hotline (se garantibetingelse sidst i dette afsnit). Men husk, at vores hotline ikke kan gennemføre hard- og softwareundervisning. Servicemedarbejderen støtter dig via telefonen, med hjælp til selvhjælp under fejlafhjælpningen. Når du ringer til vores hotline, skal du have følgende oplysninger parate:
  - Apparatets serienummer (S/N).
  - Din kvittering for købet.

Licensbestemmelser - Licensaftale

I licensbestemmelserne til en software, forklares hvilke rettigheder du har til at bruge softwaren. Dermed berøres også en væsentlig forskel i opfattelsen af kunde/bruger og producent. Mens en kunde/bruger mener, at have købt softwaren, at eje den, taler producenterne af softwaren kun om at sælge/tilbyde kunden en „begrænset“ brugsret under bestemte omstændigheder. Normalt må softwaren kun bruges i forbindelse med det købte system. Desuden kan en erhvervsmæssig brug være begrænset. I givet fald, må softwaren ikke anvendes til styring af maskiner, eller til udvikling af våben. Derudover findes også begrænsninger i bestemmelserne vedr. producentens ansvar.

Hvis du ikke fuldt ud kan godkende licensaftalen, er du ifølge producenten ikke berettiget til at bruge den pågældende software. Eventuelt er enkelte regler i licensaftalen juridisk ubestemte. Disse punkter kan dermed være ugyldige og er derfor ikke længere bindende for dig. Hvis licensaftalen ikke godkendes, kan dette være forbundet med en returret af softwaren.

Husk, at det i denne forbindelse drejer sig om softwareproducentens returret af softwaren og ikke hardwareproducentens. I dette tilfælde, skal du kontakte softwareproducenten vedrørende returnering af softwaren. Dit system blev tilbudt som pakkepris. Derfor er en prisbedømmelse af enkelt- og softwarekomponenter ikke genstand for tilbuddet. En prissammenligning kan bevidst ikke foretages og differencen refunderes derfor heller ikke.

Garantioplysninger og hotlinenumre

36 måneders garanti fra købsdatoen

Denmark

Vigtige garantioplysninger

SILVERCREST®

Kære kunde.

Mange tak fordi du har købt et Silvercrest-produkt.

Før du tager dit Silvercrest-produkt i brug, skal du læse den vedlagte dokumentation og/eller online-hjælpen grundigt. Skulle du støde på problemer, som ikke kan løses ved at læse dokumentationen, skal du kontakte vores Hotline.

Hvis en telefonisk løsning ikke er mulig, vil vores hotline udløse den nødvendige service, dette omfatter gratis udbedring af produktions- og materialefejl.

For at se de seneste oplysninger og oftest stillede spørgsmål skal du besøge: www.silvercrest.cc

Bemærk, at garantien på de genopladelige batterier er 12 måneder.

Denne garanti er gældende i Danmark.

Dine almindelige garantirettigheder over for forhandleren gælder ud over denne garanti og begrænses hermed ikke af den.

BT

36 month warranty

Telefonnummer til Hotline

38 - 322 953

(Sørg for at have dit serienummer klar!)

Producent:

TARGA GmbH
Postfach 22 44
D-59482 Soest
www.silvercrest.cc

CE

EC-Declaration of Conformity

Adress:	Targa GmbH Lange Wende 41 59494 Soest, Germany
Brand:	Silvercrest
Product:	Digital ball point pen
Model:	DGP1000

The product complies with the requirements of the following European directives:

2004/108/EC	Electromagnetic Compatibility

Compliance was proved by the application of the following standards:

EMC:	EN 55022: 2006 EN 55024: 1998 +A1: 2001 +A2: 2003
Year of CE marking:	2010

Soest, 9th of June 2010

Matthias Klauke, Managing Director

TARGA GmbH
Lange Wende 41
D-59494 Soest
www.silvercrest.cc

CE

IE
DK

Mat-No: 1579264